


## AHCC SERIES- CASED HYDRONIC HEATING

### Installation:

- Position the new Hydronic Heat Unit over the discharge of the existing air handler.
- Seal air-tight around fit-up
- Install circulator (by other) and close loop as required

**Note:** The coil is multi-position and may be installed vertically or horizontally, upflow or downflow.

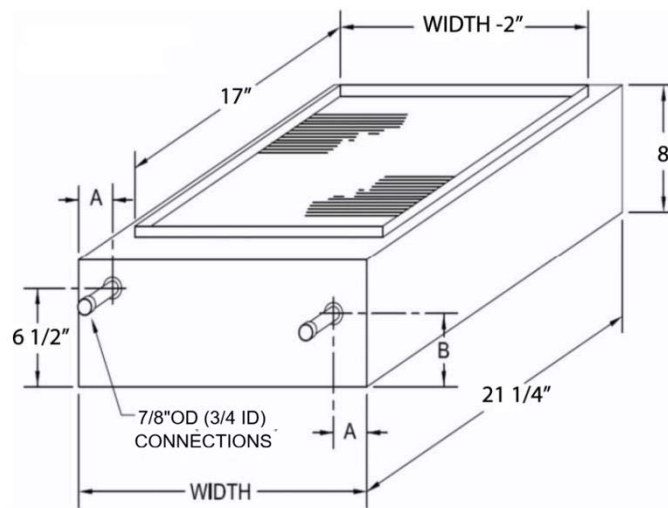

### Dimensions

| Model      | Width   | A  | B        |
|------------|---------|----|----------|
| AHCC-2-150 | 15"     | 2" | 5-13/32" |
| AHCC-2-175 | 17-1/2" | 2" | 5-13/32" |
| AHCC-2-195 | 19-1/2" | 2" | 5-13/32" |
| AHCC-2-210 | 21"     | 2" | 5-13/32" |
| AHCC-2-235 | 23-1/2" | 2" | 5-13/32" |
| AHCC-2-260 | 26"     | 2" | 5-13/32" |
| AHCC-3-150 | 15"     | 2" | 4-11/32" |
| AHCC-3-175 | 17-1/2" | 2" | 4-11/32" |
| AHCC-3-195 | 19-1/2" | 2" | 4-11/32" |
| AHCC-3-210 | 21"     | 2" | 4-11/32" |
| AHCC-3-235 | 23-1/2" | 2" | 4-11/32" |